

Beginners Hints / Tips Cheat Sheet

FLYING

Find a good space with soft landings, If windy, go into headwind, careful above tree-line

Get used to holding a steady low height, eg 2 -3 metres

Keep all trims on Zero whilst learning.

Expect drift with air currents, especially indoor (gets turbulent) or near ground

Try take off from hand to get a feel for throttle sensitivity, and avoid “ground effect”

In mode 2, fly white lights directly away from self, for natural, intuitive orientation on right stick....
the drone will match <L- R> and Forward – Back movement exactly

Smart Orientation, Inverted, and Return features - To set Heading each flight:

Reset = both sticks to bottom right for 1 second

Lights flashing during flight: ~20 seconds~ battery warning – its time to re-charge or pit-stop!

Stunt mode – gentle to steer, flick to flip. Best on fresh battery. Throttle up a touch before flip.

Inverted Flying drains battery very quickly

CAMERA

Please get used to flying, and landing on hand before adding camera

In low/no wind, try using trims to counter air currents....for smoother video

Standard Cam quality is 480x640, the HD is 720x1280

GENERAL

Modular parts / spares in web shop

All blades and motors are different. Same colours are angled/spin oppositely

To disconnect – squeeze the 2 white connector terminals, then pull apart on battery side. Please dont tug on the drone cable.

Let battery cool for 5 mins before recharging.

Keep blades squeezed on tight, and free of fractures, hair, grass etc. Check start / stop evenly